



Warning:

Do not apply lock/unlock air pressure without master cover plate properly attached. If cover plate is not used, master should be properly attached to interface. Failure to do so could result in damage to cover plate and o-ring.


## Notes:

- Master side mounting hardware provided.
   Cover plate is not necessary if robot interface plate provides sealing. The recommended interface plate bore depth without a cover plate is 2.5mm, with cover plate is 5.6mm.
- 3. Orientation marks are provided to assist in robot teaching.

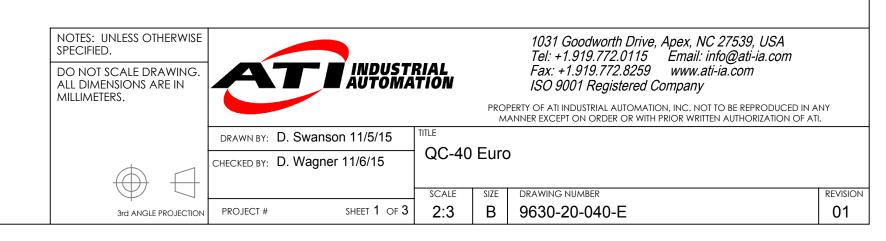

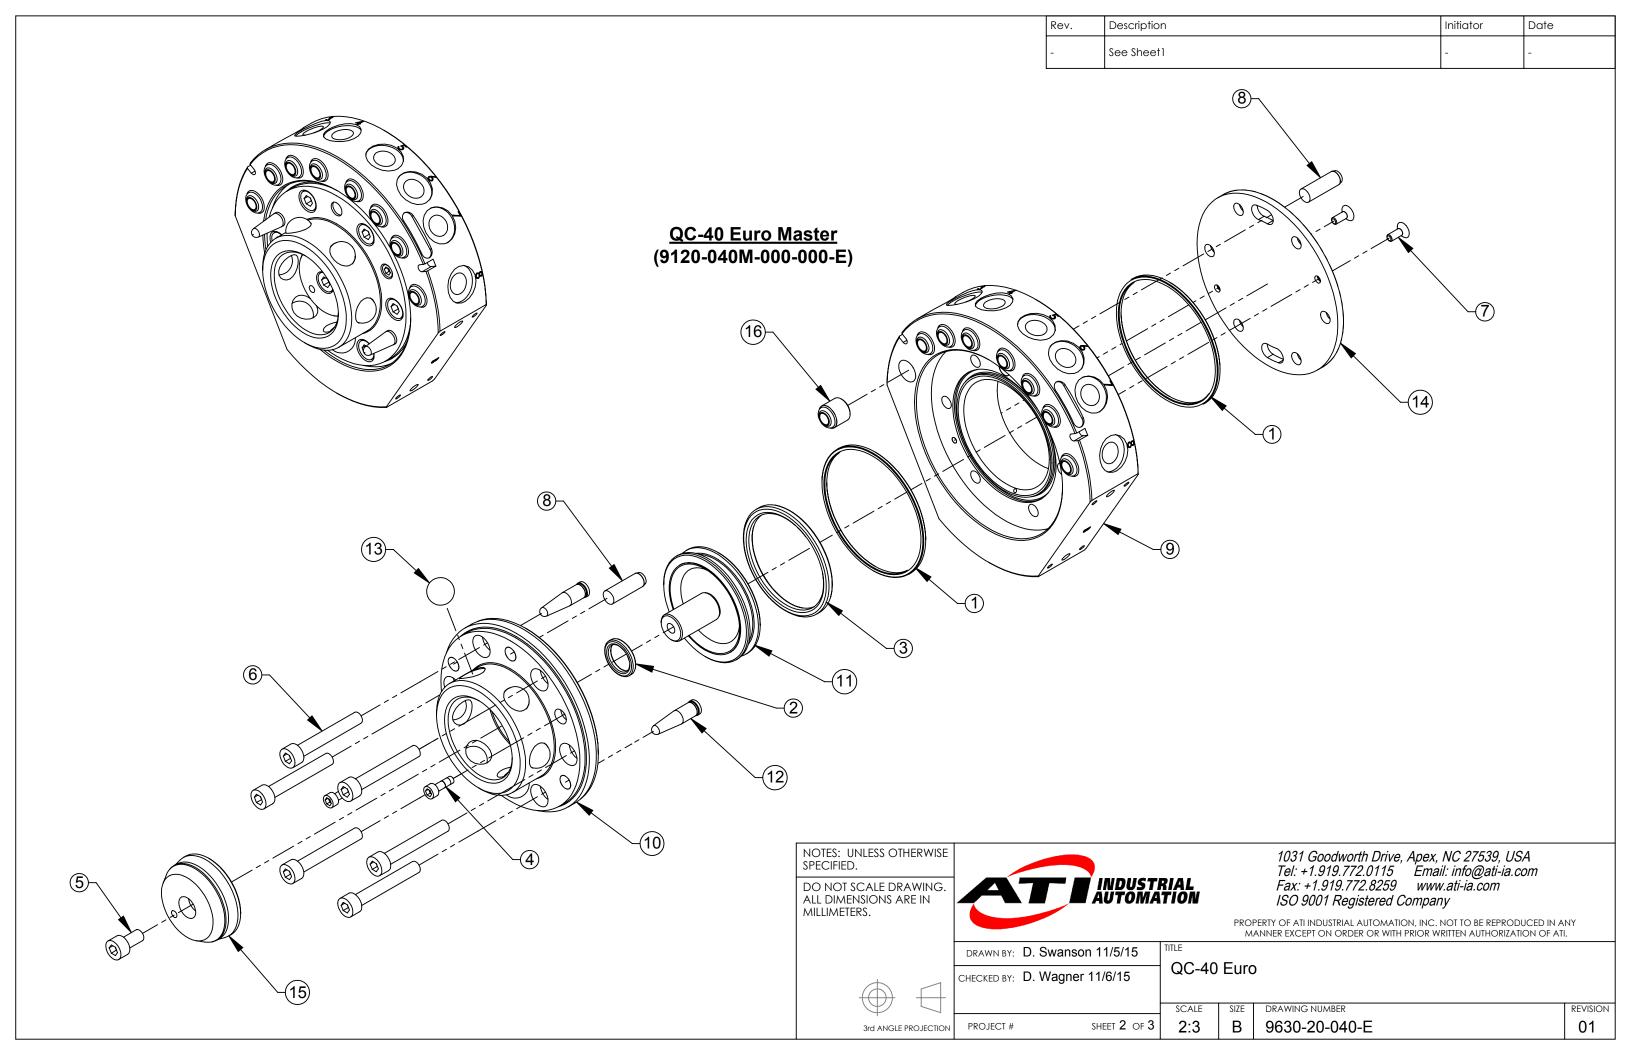

Rev.	Description	Initiator	Date
-	See Sheet1	-	-

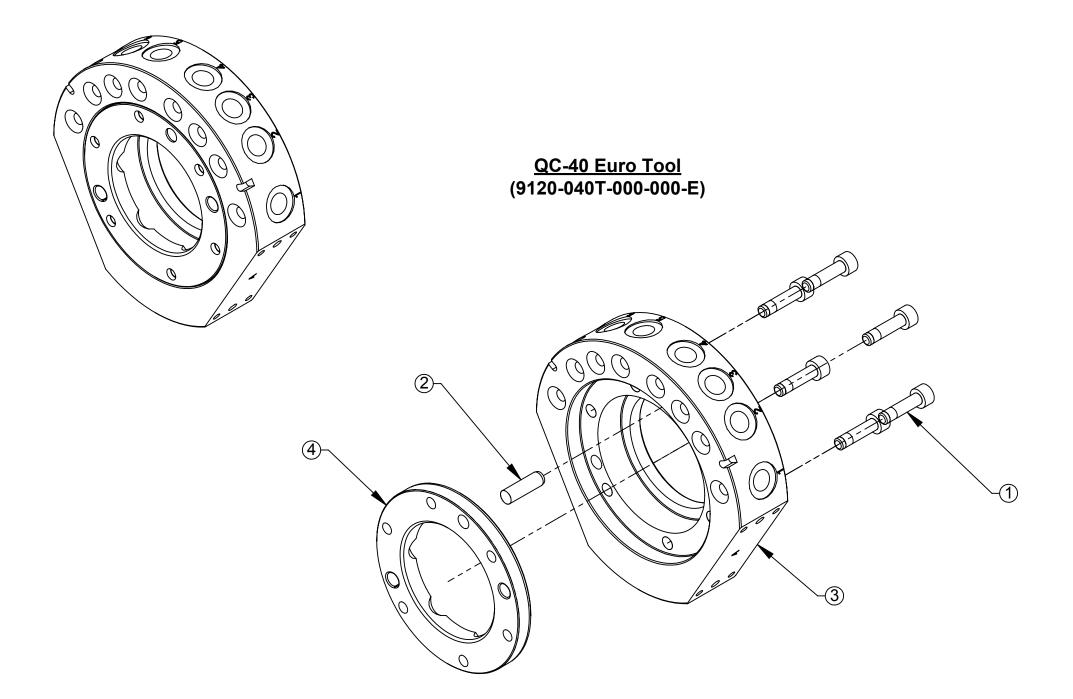



1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com Fax: +1.919.772.8259 www.ati-ia.com ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

3rd ANGLE PROJECTION

CHECKED BY:

DRAWN BY: D. Swanson 11/5/15
CHECKED BY: D. Wagner 11/6/15

SHEET 3 OF 3

QC-40 Euro

SCALE SIZE DRAWING NUMBER
2:3 B 9630-20-040-E

UMBER REVISION 01