

Description	Initiator	Date
Eco 13418; Removed Cleat Assemblies. Updated Electrical Shock Note.	CF	6/22/2015


	Power			
r r		Tool Connector	Function	
/		A	U	
~		С	V	
-		E	W	
3		G	Gnd	
		F	Brake	
)		D	Brake	

_				
	Signal			
er		Tool		
or		Connector	Function	
E		E	*RD (5)	
		F	RD (6)	
2		Р	FG (3)	
٩		Α	+5V (8)	
3		В	0V (7)	
C G		D	+5V (9)	
G		G	0V (10)	
			+6V (4)	
2		С	Batt	
II		Shell		


B	Battery Backup			
1		Battery		
r		Connector	Function	
			+6V (4)	
2		3	Battery	
			0V (7)	
3		2	Battery	

RD & *RD Are Twisted and Shielded (Battery Power is Diode Protected)

TOOL SIDE CONNECTORS

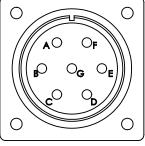

POWER CONNECTOR MS3102E20-15S

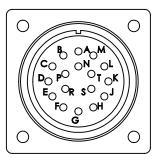

SIGNAL CONNECTOR MS3102E20-29S



BATTERY CONNECTOR TURCK FKB3-05

1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com Fax: +1.919.772.8259 www.ati-ia.com ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

EF17 Servo Assembly & Wiring

E	SIZE	DRAWING NUMBER	REVISION
-	В	9630-20-EF17	03