
Valve Adapters with Double Solenoid, Valve Pass Thru and Pressure Switch, with Rc 1/4 (BSPT) Air Port

<u>0</u>

Exhaust Muffler-

ev.	Description	Initiator	Date
5	Eco 18901; Added Inline Filter 3490-0010005-01; Added Dim (59).	CF	4/14/2020

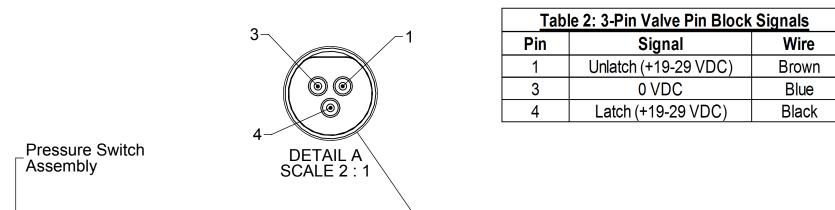


Ledge Mount 7


00

Ledge Mount-


Rc 1/4 (BSPT)
Air Port (Adapter)

See Table 1 for Models

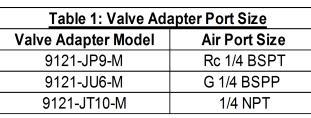

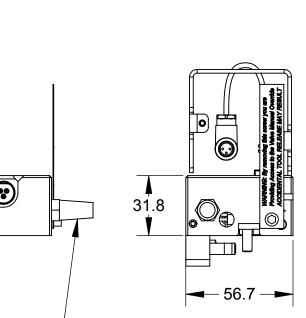

ITEM NO.	QTY	PART NUMBER	DESCRIPTION
1	1	3405-1030005-01	Fitting, Adapter, 1/4NPT to G1/4
	1	3405-1030008-01	Adapter, 1/4 NPT Male x Rc 1/4 Female
2	1	3405-1210026-01	Fitting, Straight, 3/8" Tube, 1/8" NPTF
3	1	3490-0010005-01	Air Filter, 1/4 NPT Male X 1/4 NPT Female
4	1	3490-1010002-00	Conical Breather 1/8 NPT
5	2	3500-1057006-15A	M3-0.5 x 6mm SHCS, Blue, Pre-Applied
6	2	3500-1066020-15A	M6-1 x 20mm SHCS, Blue, Pre-Applied
7	2	3500-1264040-15	M5 x 40mm SFHCS, Blue Dyed Magni-565
8	1	3700-20-10985	PS1000 Guard for use with QC210 Valve Adapters
9	1	9015-20-1265	Robust PS1000 Sensor Assembly

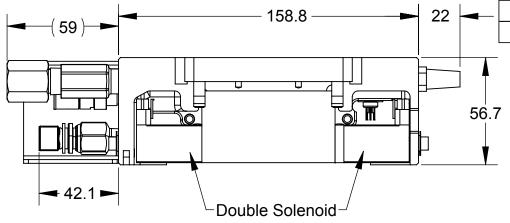

NOTES: UNLESS OTHERWISE SPECIFIED.


DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.



1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com www.ati-ia.com Fax: +1.919.772.8259 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

Notes: Valve Adapter to Tool Changer mounting are shown on Sheet 2.
Pneumatic and Electrical Schematic are shown on Sheet 3.
Other models are covered in the 9620-20-C-Jxx Valve adapter with a Double Solenoid, Valve Pass Thru and Pressure Switch Manual.

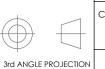

DRAWN BY: E. McCain, 2/17/16 CHECKED BY: W. Berrocal, 2/18/16


Valve Adapter, Double Solenoid, Rc, QC-210 w/ Valve Pass Thru and Pressure Switch

DRAWING NUMBER SCALE PROJECT # 141030-3 SHEET 1 OF 3 1:2

9630-20-Jxx Dou Sol Pas Th Pr Sw 210

05

REVISION

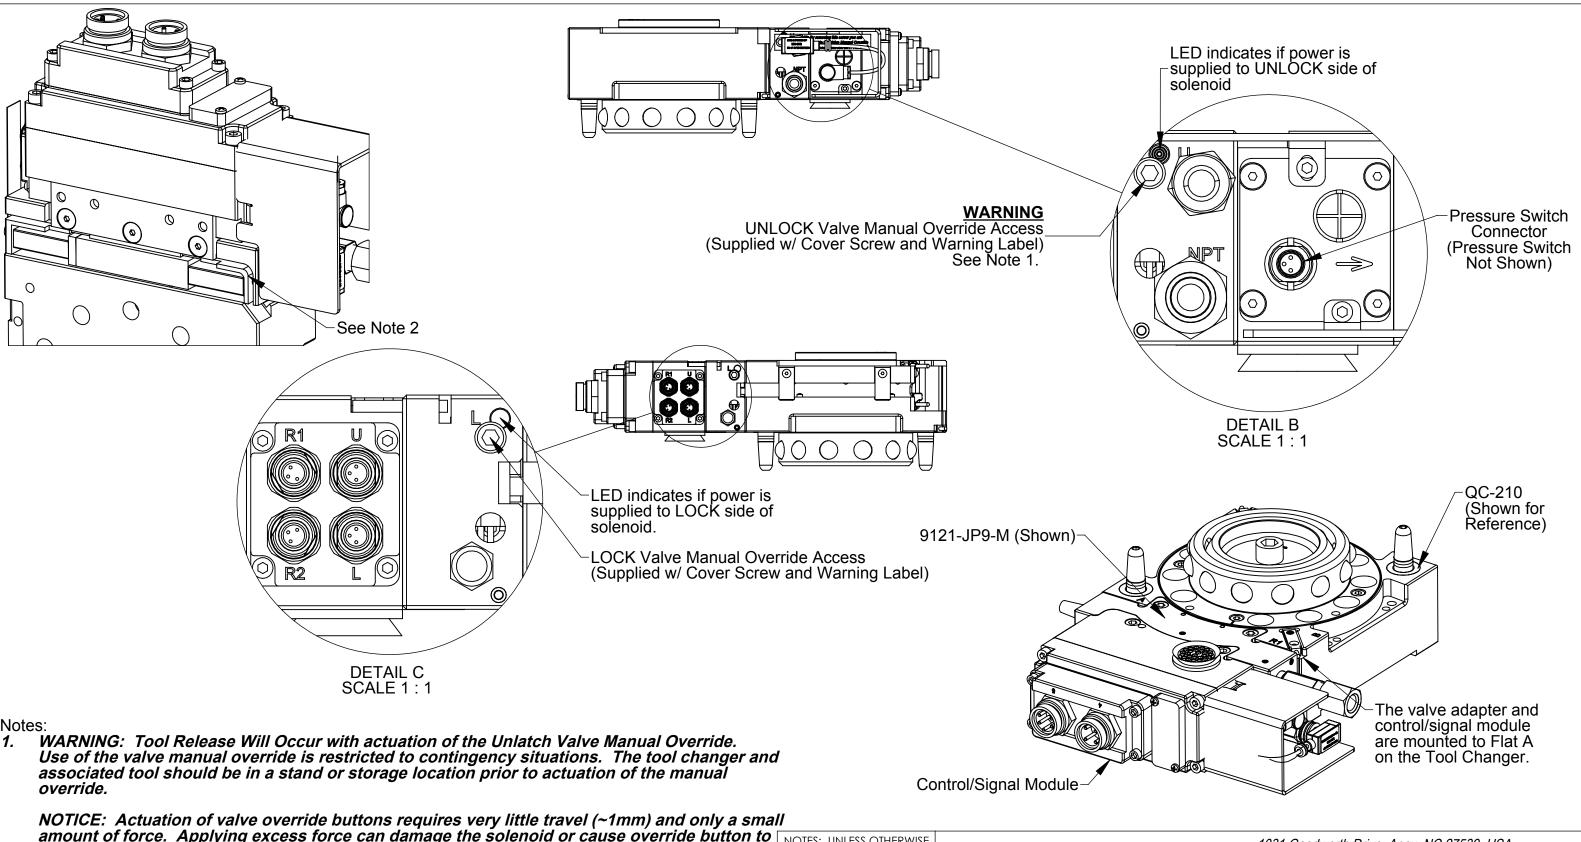


Notes:

amount of force. Applying excess force can damage the solenoid or cause override button to NOTES: UNLESS OTHERWISE stick in one position. Use non-sharp object, similar to ball nose 2mm Allen key, to gently depress the override button; an air release should be heard when the solenoid is activated.

- The valve adapters with double solenoid are designed to be integrated with specific models of control/signal modules with a valve connector. The Valve Adapter provides routing for the ready to
- lock sensor cable from the Tool Changer or Utility Coupler to the control/signal module.

 The Valve Adapters include a Pressure Switch Assembly. The Pressure Switch turns on (indicated by red LED) when the supply pressure to the Valve reaches or exceeds 60 psi (Note: the Pressure Switch output is PNP). The air pressure to the Pressure Switch is NOT to exceed 145 psi. The Pressure Switch is encapsulated in translucent 3M DP125 potting to achieve IP65 rating. The Pressure Switch inserts into the 1/4" tube push-to-connect fitting.

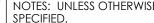

DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.



1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com Fax: +1.919.772.8259 www.ati-ia.com ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

3rd ANGLE PROJECTION

RAWN BY:	E. McCain, 2/17/16
ECKED BY:	W. Berrocal, 2/18/16

Valve Adapter, Double Solenoid, Rc, QC-210 w/ Valve Pass Thru and Pressure Switch

DRAWING NUMBER SCALE PROJECT # 141030-3 SHEET 2 OF 3 1:5

9630-20-Jxx Dou Sol Pas Th Pr Sw 210

REVISION

