

#### **Table 1: Valve Adapter Port Size Valve Adapter Model Air Port Size** 9121-JT3-M 1/4" NPT G 1/4 BSPP 9121-JU3-M 9121-JP5-M Rc 1/4 BSPT

**Signal** 

Unlatch (+19-29 VDC)

0 VDC

Latch (+19-29 VDC)

**©**-

Pin

3

# Table 2: 3-Pin Valve Pin Block Signals Wire **Brown** Blue **Black**


Description

TBC


3/7/2020

ECO 18784: Sheet 1: Added 3490-0010005-01 to BOM Table. Lower left views: (50) was 14 & (59) was 28.9.

## Valve Adapters with Double Solenoids and G 1/4 (BSPP) Air Ports

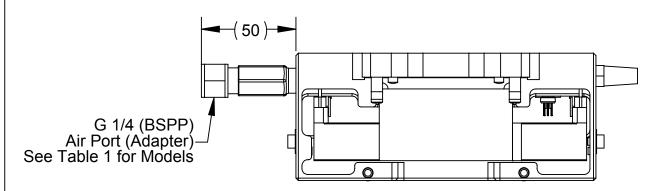

## Valve Adapters with Double Solenoids and Rc 1/4 (BSPT) Air Ports

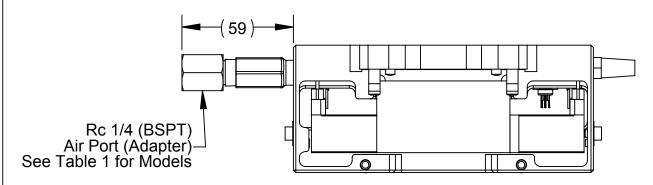

### Notes:

- Valve Adapter to Tool Changer mounting is shown on Sheet 2. Pneumatic and Electrical Schematic are shown on Sheet 3.
- Other models are covered in the 9620-20-C-Jxx Valve adapter with a Double Solenoid with Valve Pass Through manual.

	ITEM NO.	QTY	PART NUMBER	DESCRIPTION
	1	1	3405-1030005-01	Fitting, Adapter, 1/4NPT to G1/4
		1	3405-1030008-01	Adapter, 1/4 NPT Male x Rc 1/4 Female
	2	1	3490-0010005-01	Air Filter, 1/4 NPT Male X 1/4 NPT Female
	3	1	3490-1010002-00	Conical Breather 1/8 NPT
	4	2	3500-1066020-15A	M6-1 x 20mm SHCS, Blue, Pre-Applied

NOTES: UNLESS OTHERWISE SPECIFIED. DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.

1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com www.ati-ia.com Fax: +1.919.772.8259 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY:	J. Handy, 1///16
CHECKED BY:	W Berrocal, 9/8/16


QC-310 Valve Adapter with Double solenoid, Valve Pass Through

SCALE SHEET 1 OF 3 1:2 PROJECT #

9630-20-Jxx Dou Sol Pas Thru QC310


03

REVISION

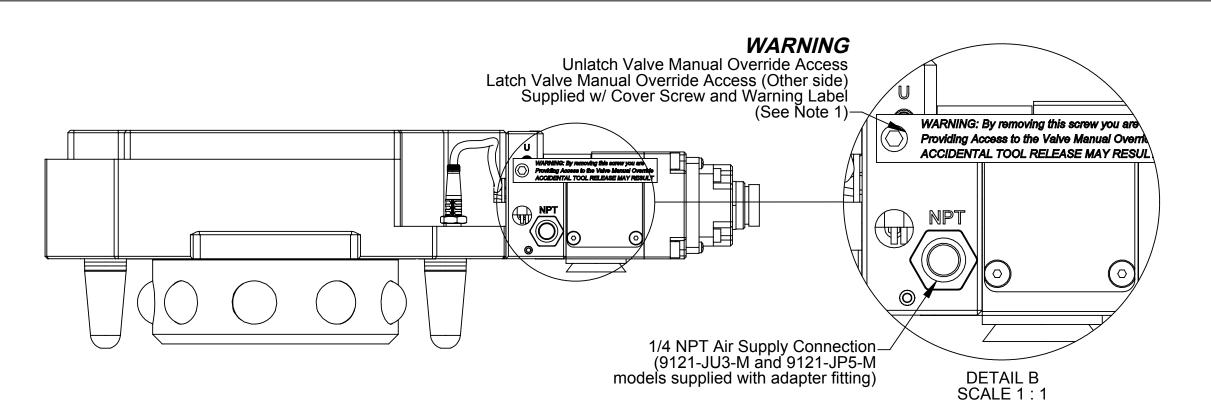

The valve adapter and control/signal module are mountedto Flat A on the Tool Changer

The Integrated Sensor Cables for Locked, Unlocked and Ready-to-Lock inputs are supplied with the base tool changer package.

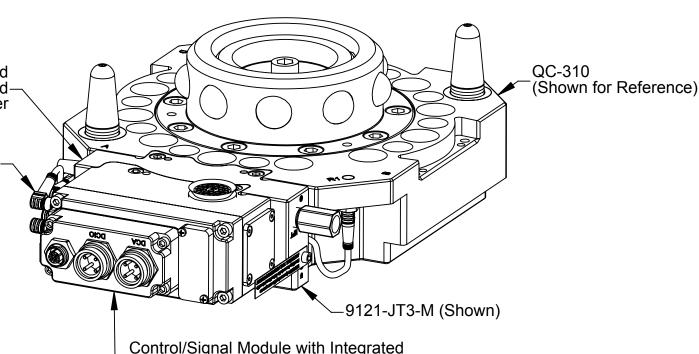

Notes:

WARNING: Tool Release Will Occur with actuation of the Unlatch Valve Manual Override. Use of the valve manual override is restricted to contingency situations. The tool changer and associated tool should be in a stand or storage location prior to actuation of the manual override.

NOTICE: Actuation of valve override buttons requires very little travel (~1mm) and only a small amount of force. Applying excess force can damage the solenoid or cause override button to stick in one position. Use non-sharp object, similar to ball nose 2mm Allen key, to gently depress the override button; an air release should be heard when the solenoid is activated.

- The valve adapters with double solenoid are designed to mount to QC-310, QC-313, QC-510, amd QC-1210 Tool Changers.
- The valve adapters with double solenoid and valve pass through connectors are designed to be integrated with specific models of control/signal modules with an integrated pass through valve connector.



1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com Fax: +1.919.772.8259 www.ati-ia.com ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

3rd ANGLE PROJECTION

DRAWN BY: J. Handy, 1/7/16 CHECKED BY: W Berrocal, 9/8/16

Pass Through Valve Connector

QC-310 Valve Adapter with Double solenoid, Valve Pass Through

SCALE DRAWING NUMBER SHEET 2 OF 3 1:2 В PROJECT #

9630-20-Jxx Dou Sol Pas Thru QC310

03

REVISION

