 
 


Notes:

- Do not couple or uncouple the servo modules unless electrical power has been disconnected and discharged both upstream and downstream from the modules.
 Do not service modules with power applied to contacts.
 See 9630-20-GB8 and 9630-20-R4 drawings for electrical module details.
 See 9121-JJ14-M/T drawings for adapter plate assembly.



DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.





1031 Goodworth Drive, Apex, NC 27539, USA Tel: +1.919.772.0115 Email: info@ati-ia.com Fax: +1.919.772.8259 www.ati-ia.com ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: T. Payne, 1/16/15 CHECKED BY: W. Berrocal, 1/22/15

UF2 Electrical Module Assembly

SCALE PROJECT # 150115-1 SHEET 1 OF 1 1:5

DRAWING NUMBER В

9630-20-UF2

REVISION

03