
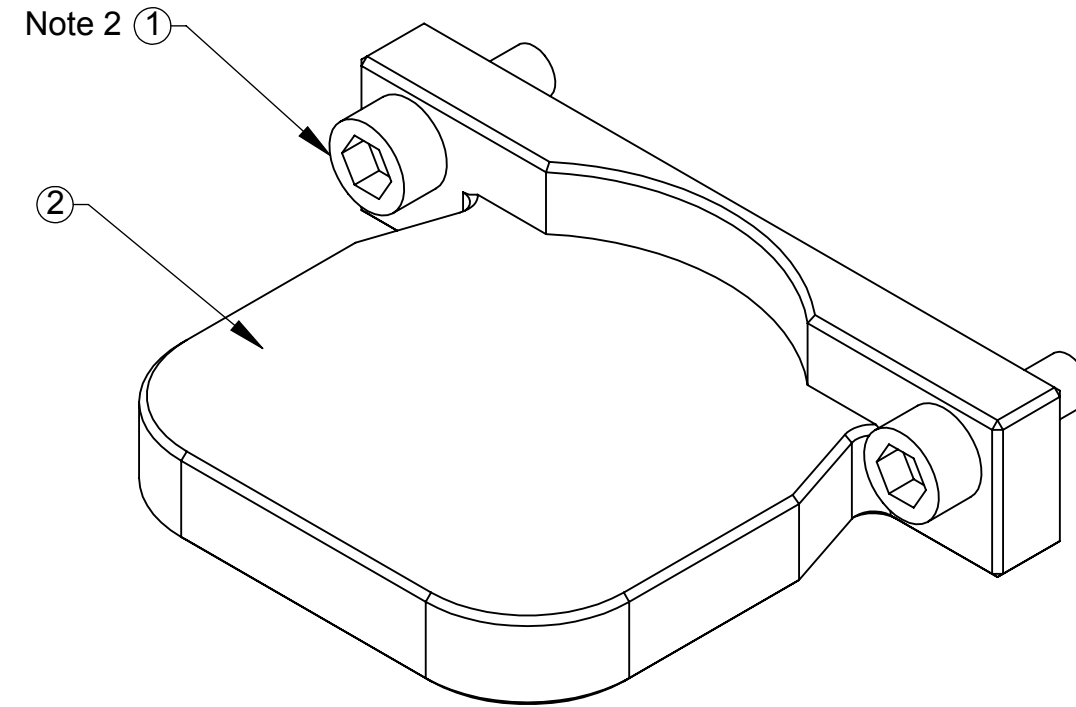


Rev.	Description	Initiator	Date
01P	Initial Design	JEW	2/11/2008
02	Release, No Changes	JEW	10/13/2008
03	Eco 8719; Changed torque spec in Note 2 from 25 to 12 in-lbs. Updated Title Block.	CF	6/24/2011

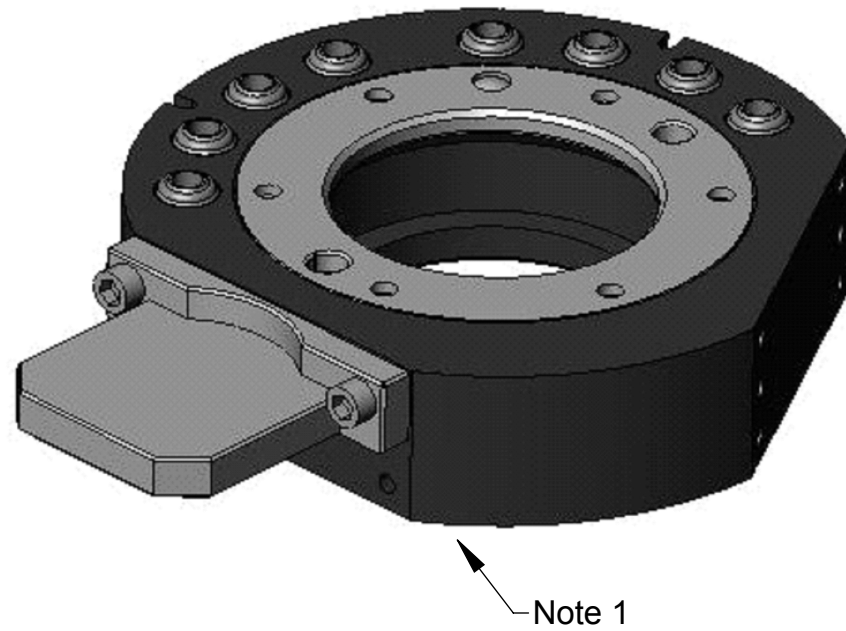

Notes:

1. When mounting to QC make sure the module is oriented as shown in the above picture.
2. When mounting to QC torque to 12 in-lbs.

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	2	3500-1062012-15A	M4 x12 SHCS, Blue Dyed Magni-565, ND Microspheres
2	1	3700-20-5453	JPC Protective Tool Module

NOTES: UNLESS OTHERWISE SPECIFIED.

DO NOT SCALE DRAWING. ALL DIMENSIONS ARE IN MILLIMETERS.



3rd ANGLE PROJECTION



1031 Goodworth Drive, Apex, NC 27539, USA
 Tel: +1.919.772.0115 Email: info@ati-ia.com
 Fax: +1.919.772.8259 www.ati-ia.com
 ISO 9001 Registered Company

PROPERTY OF ATI INDUSTRIAL AUTOMATION, INC. NOT TO BE REPRODUCED IN ANY MANNER EXCEPT ON ORDER OR WITH PRIOR WRITTEN AUTHORIZATION OF ATI.

DRAWN BY: J. Williams, 2/11/08		TITLE	
CHECKED BY: D. Lawson, 2/11/08		JPC Protective Tool Module	
PROJECT #	080205-1	SHEET	1 OF 1
SCALE	2:1	SIZE	B
DRAWING NUMBER	9120-JPC-T		REVISION
			03