



VIEW A-A
 (9005-50-1029, OPTIONAL BENCH MOUNT ADAPTER)

SIDE MOUNTING PATTERN

APPLICATION NOTES:
 1) RC-660-ER-E SUPPLIED WITH 8mm TUBE ADAPTER.

- NOTES:
- 1) SPINDLE AIR SUPPLY TO BE REGULATED TO 6.2 BAR [90 PSI].
 - 2) AIR SUPPLY TO BE FILTERED 5 MICRON OR BETTER, DRY, AND NON-LUBRICATED. (THE USE OF A COALESCING FILTER IS RECOMMENDED)
 - 3) SPINDLE AIR CONSUMPTION 5.43 L/S [11.5 CFM] AT IDLE, 18 L/S [38 CFM] AT STALL.
 - 4) SUPPLIED AIR FITTINGS MAY BE REMOVED TO UTILIZE CUSTOMER SUPPLIED 1/8NPT AND 3/8NPT FITTINGS.
 - 5) DO NOT USE LIQUID THREAD LOCKER ON MOUNTING FASTENERS, USE LOCK WASHERS.
 - 6) DO NOT EXCEED THE MAXIMUM THREAD LENGTH SHOWN FOR MOUNTING FASTENERS.

NOTES: UNLESS OTHERWISE SPECIFIED
 DO NOT SCALE DRAWING. DRAWN IN SOLIDWORKS.
 ALL DIMENSIONS ARE IN MILLIMETERS.

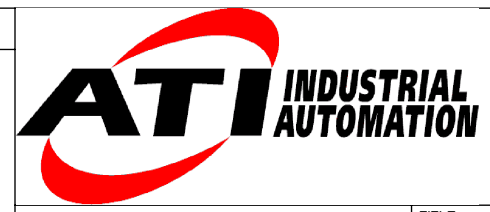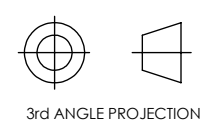

1031 Goodworth Drive, Apex, NC 27539, USA
 Tel: +1.919.772.0115 Email: info@ati-ia.com
 Fax: +1.919.772.8259 www.ati-ia.com
 ISO 9001 Registered Company

DRAWN BY: D.Lawson-8/1/06	TITLE RC Deburring Tool, 660-ER Series		
CHECKED BY: L.Hines-8/10/06	SCALE 1:2	SIZE B	DRAWING NUMBER 9230-50-1038-01
WEIGHT LBS: ---	PRODUCT RELEASE # 060725-1 DATE:		
ASSEMBLY REF:	SHEET 1 OF 1		